## **REFRESHER** for lacquered floors

WOOD ACCESSORIES - PRODUCT INFORMATION

Tarkett Refresher refreshes, protects and reinforces the varnish on your wooden floors.

- The Refresher for lacquered floors gives a new fresh appearance to the surface and removes micro scratches.
- The Refresher is suitable for both domestic use and for public environments where floors are exposed to severe wear.
- The treatment is simple, quick and needs only a well cleaned surface. It doesn't involve expensive preparation.
- Unlike normal polishes, the Refresher contains no wax to make the floor slippery. The treatment can be repeated frequently without building up thick layers.
- Use in undiluted form.
- The treatment slightly increases the gloss level of the floor.
- · Do not use Refresher on newly installed floors.
- If the floor has been exposed to grease, floor soap, wax or polish, clean well with an appropriate agent for removing this. Otherwise simply
  vacuum or dry mop the floor. Clean with a slightly damp microfibre mop. Use Tarkoclean for lacquered floors or similar general purpose
  cleaner for floors. Then apply the Refresher in an even and thin layer in the direction of the boards using a very clean, damp microfibre mop.
  Avoid surplus application. Follow instructions on the bottle.
- If the floor surface is exposed to road salt the floor must be wet mopped to remove this before applying the Refresher.
- Avoid strong sunlight and draughts during application.
- · Switch off under-floor heating well in advance.
- Can be carefully walked on after the water has evaporated. Can be used after 12 hours.
- A floor treated only with the Refresher can be varnished again without removing the Refresher but the floor must always be sanded slightly before re-varnishing. It can also be damp mopped or cleaned with Tarkoclean for lacquered floors between each treatment without dissolving the Refresher.
- How often you need to apply the Refresher depends on the degree of wear and tear of your floor. Below are some rules of thumb for cleaning intervals.

## Shake the bottle well before use!

. . . .

The product use frequency will vary depending on the wear and tear. See below for general guidelines.

Heavy wear	e.g. shops	1–4 times a month	
Medium wear	e.g. offices	1–3 times every three months	
Light wear	homes	Once or twice a year	

ated.	
8 months in unopened bottle. For opened bottle: Always make a small test in a corner before use.	
Sensitive to frost. 5–25°C recommended.	
Non-flammable	
o regulation. IN-4X4T	





Scan the QR-code for Safety data sheet.

