











# OIL REPAIR KIT

## WOOD ACCESSORIES - PRODUCT INFORMATION

If you drop a cup or get a scratch in your hardwax oiled floor, don't worry. We have the Oil Repair Kit to make spot repairs. One box with oils, brushes and sanding papers that, together with a little time and effort, will repair scratches and smaller damages. And of course, colour-matched to all floors with hardwax oil in our range.

Product Description		
	Base Coat	Top Coat
Colour number	500, 501, 505, 506, 507, 508, 509, 510, 511, 512	500, 501, 505, 506, 507, 508, 509, 510, 511, 512
	Transparent or coloured wood finish.	Clear, matt wood finish.
Complies with the migration behavior acc to EN 71.3.		
	Based on natural plant oils and waxes (sunflower oil, soya oil, thistle oil, carnauba wax and candelilla wax), paraffin, iron oxide and organic pigments, titanium dioxide white pigment, siccatives (drying agents) and water-repelling additives.	Based on natural plant oils and waxes (sunflower oil, soya oil, thistle oil, carnauba wax and candelilla wax), paraffin, siccatives (drying agents) and water-repelling additives.

Oil Repair Kit	Description / Colour number	SAP number
	510 - Opal White	8790510
	505 - Lime Stone	8790505
	507 - Urban Grey	8790507
	512 - Grey	8790512
	511 - Driftwood	8790511
	508 - Blonde	8790508
	500 - Clear	8790500
	509 - Old Grey	8790509
	501 - Umber	8790501
	506 - Old Brown	8790506

Hanaskog 2021.02

Find the matching colour for your floor in the Matching Matrix

Technical Information		
	Base Coat	Top Coat
Colour number	500, 501, 505, 506, 507, 508, 509, 510, 511, 512	500, 501, 505, 506, 507, 508, 509, 510, 511, 512
Density	0,9 - 1,3 g/cm <sup>3</sup>	0,88 - 0,95 g/cm <sup>3</sup>
Viscosity	>70s DIN EN ISO 2431/3 mm, viscid	95-240 mPas
Odour	Faint/mild, odourless after drying	
Flash point	>61° C, acc. to DIN EN ISO 2719	>60° C, acc. to DIN EN ISO 2719
Storage	At least 5 years in a sealed container. To restore after exposure to frost, store for 24-36 hours at room temperature before use.	
Coverage	Approx. 3 m <sup>2</sup> - depending on the way of application	
Drying time	Approx. 24 hours (normal climate conditions: 23° C / 50% rel.humidity). Lower temperatures and/or higher air humidity can increase the drying time. Ventilate well while drying.	Approx. 8-10 hours (normal climate conditions: 23° C / 50% rel.humidity). Lower temperatures and/or higher air humidity can increase the drying time. Ventilate well while drying.
Caution	Keep out of reach of children. Do not get in eyes, on skin or on clothing. If medical advice is needed, have product container or label at hand. Use only outdoors or in a well-ventilated area. Wash out any used cloth impregnated with this product immediately after use or store in an airtight container (danger of self-ignition).	
Disposal	Dispose according to local guidelines, waste code number 08 01 11. Only completely emptied cans can be recycled.	
Material safety data sheet available on <a href="http://tarkett.com">tarkett.com</a>		









**Each box contains:**

- > 0,125 ltr of specific colour – base coat (1 or 2 cans)
- > 0,125 ltr of transparent – top coat
- > Instruction of use
- > Sanding paper 150 grid (3pcs)
- > Sanding pad 360 grid
- > Brass brush (e.g. for structured flooring)
- > Flat brush
- > Pads/cloths



# OIL REPAIR KIT

## INSTRUCTION

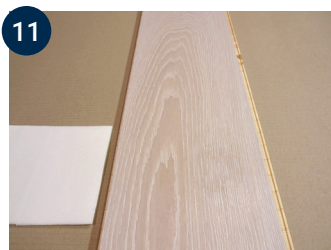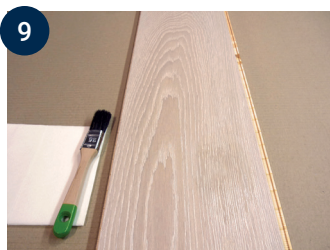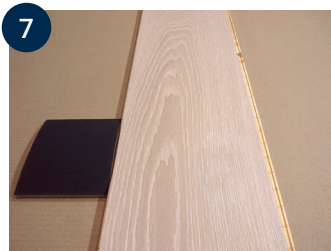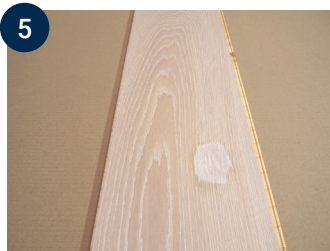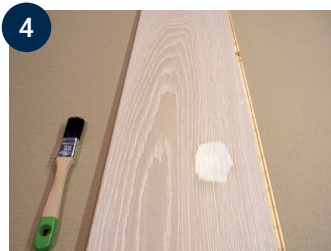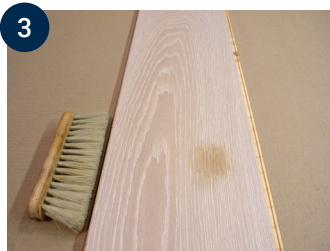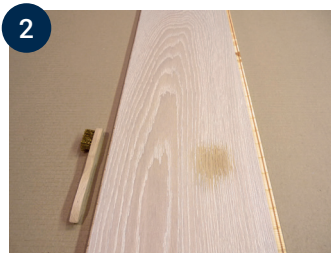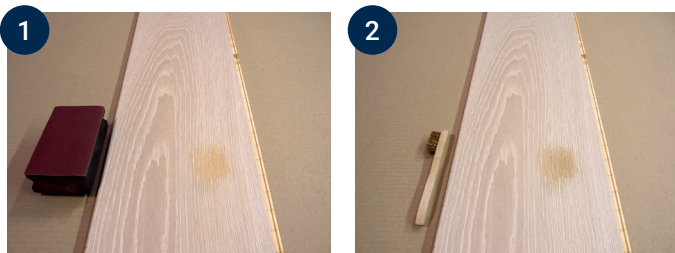

1. If needed (depending on damage) use the sanding paper 150grid. Grind in the same direction as the wood fibers.
2. For floors with deeper structure, use the brass brush to copy the original surface.
3. Make sure the damaged surface is clean from dirt and dust.
4. Apply a thin layer of the Base Coat, stir well before use, using the included brush. Carefully remove the excess with a cloth.
5. Leave to dry for at least 24 hours.
6. Where 2 colours are needed, repeat point 3 to 5.
7. If needed (depending on damage) use the sanding paper 360grid. Grind in the same direction as the wood fibers.
8. Make sure the damaged surface is clean from dirt and dust.
9. Apply a thin layer of the Top Coat, stir well before use, using the included brush. Carefully remove the excess with a cloth.
10. Leave to dry for at least 8 hours or overnight.
11. To level out the gloss, polish the repaired spot using Tarkett Refresher for Hardwax Oiled floors on a cloth.
12. This instruction can also be used for our Stair nosing solution.

**Warning:** Wash out cloths used for oil immediately after use or store in an airtight container (danger of self-ignition).