


Tarkett FiberFloor® Installation Tips

Glueless Installation
Instructions

Beautiful
and healthy
for those
you love
most.™

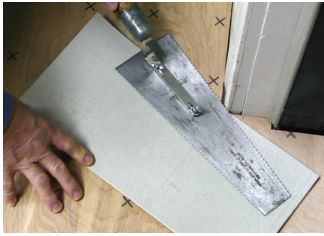

1. Undercut door moldings and casings. Sweep or vacuum substrate to remove dirt and debris.




2. Position flooring squarely in room. Allow approximately 3" up the walls to allow for trimming.



3. Using a sharp utility knife, make relief cuts at outside corners.



4. Make relief cuts at inside corners.

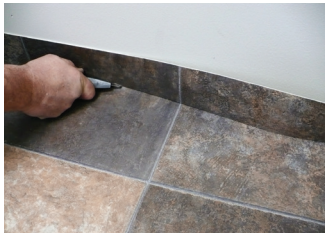

5. Trim flooring along all walls, cabinets, etc.



6. Leave a 1/4" gap around all vertical areas (walls, cabinets, pipes, etc.).



7. When a seam is required, obtain pattern match and overlap factory edges.



8. Place pieces of masking tape over seam edge to prevent movement. Using a sharp utility knife, double-cut through both pieces of flooring.



9. Remove bottom salvage piece.



10. Fold back one sheet of flooring at the seam. Position S-875 Floating Seam Tape so that it is centered under the seam cut. Starting at one end of the seam, carefully remove the one half of the release liner from the tape and position first half of flooring.



11. Reposition second piece of flooring and make sure seam is properly aligned.



12. Starting at one end of the seam, carefully remove the second half of the release liner and position second piece of flooring.



13. Position seam and roll with hand roller.



14. Seal seam with recommended Tarkett seam sealer. Protect seam from traffic for minimum of 3 hours.



15. Install base board, quarter round or cove base to cover gap at perimeter. Nail into wall, not into the floor.

Tarkett FiberFloor® can also be installed glued down. Please refer to the Tarkett installation guide for more information on this installation method.

Tarkett North America

30000 Aurora Road
Solon, OH 44139
USA: 1-877-TARKETT (1-877-827-5388)
Canada: 1-877-436-6267
www.tarkettna.com

