

NuGen™

RIGID CORE FLOORING

NuGen Installer Quick Reference Guide



NuGen Glue Down Luxury Vinyl Plank

Store all product horizontally on a sturdy flat base, NuGen does not require acclimation to jobsite conditions prior to the installation.



Basic tools needed for installation.



Ambient temperature shall be maintained between 65-85°F and 40-60% relative humidity 48 hours before during and after installation. All concrete substrates shall be tested for moisture following either ASTM F2170 or ASTM F1869.



All wood substrates shall be double construction with the top layer being APA approved underlayment grade plywood, do not install directly over OSB, chip board, or luan.



All substrates must be level within 1/8" in 8ft. This can be checked using a straight edge to identify any high and low spots. Any unevenness must be sanded down or filled with a cementitious patching compound.



Undercut doorway moldings the thickness of the flooring.



Sweep or vacuum the room and measure for squareness to determine layout.



Establish a control line prior to adhesive application and installation.



Apply QBond One adhesive using a 1/16" x 1/16" x 1/16" square notch trowel. Only apply enough adhesive that can be covered within 1-hour from the dry to touch state.



Allow the adhesive to go dry to the touch, a light touch with no transfer to the finger.



Install the first plank along the control line, paying particular attention to placement. Roll the leading edge with a small hand roller ensuring bond.



When installing planks in the adjacent rows hold plank at a 45 degree angle and slide horizontally until the plank engages. Pay particular attention to the stagger of the short end joints, the stagger shall be no less than the width of the plank in adjacent rows.




Roll flooring in both directions with a 75-100 lb. three section roller.



Measure and cut border piece. Border piece shall be no less than 2".



Install and roll with a small hand or J-type roller.

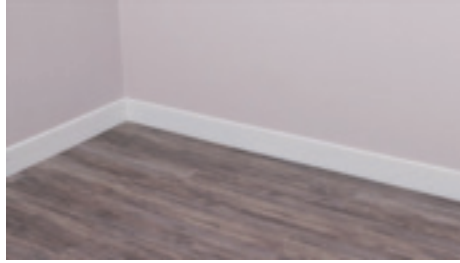

Clean any dried adhesive with denatured alcohol and a clean white rag, follow all manufacturers' precautions when using these type of products. Install Millwork or cove base or quarter round to complete the installation.

*This is a reference guide to aid a qualified, professional flooring mechanic in the installation process of Tarkett NuGen glue down luxury vinyl plank. This does not replace our installation instructions. Please visit tarkettna.com for detailed installation instructions or contact your local Tarkett distributor to schedule a training seminar.

Tarkett North America

30000 Aurora Road
Solon, OH 44139
USA: 1-877-TARKETT (1-877-827-5388)
Canada: 1-877-436-6267

www.tarkettna.com

©2020 Tarkett North America 02/2020