

Square Set

LOOSE LAY VINYL TILES

Installation Instructions

2024

IMPORTANT!

- Make sure all specifications and instructions are followed carefully.
- Contact your Tarkett representative if you are unsure about any part of the installation.
- This information is subject to change due to continuous improvement.
- Use the same batch/box number for each continuous surface (if material from several boxes is used, they should have the same manufacturing serial number and be used in consecutive order).
- Store the boxes in small, neat piles (max. 5 boxes high).
- Let the flooring acclimatize for at least 24h before laying at room temperature (minimum 15°C).
- The subfloor must be flat, level, clean, without marks (no felt pen, marker, etc.), sound, dry, solid, hard, smooth and not exposed to moisture. Absorbency must be checked and adjusted to have moderately absorbent subfloor.
- Use only adhesives recommended by Tarkett. Always follow the adhesive manufacturer's instructions.
- The work must be completed with an inspection: ensure that the newly laid floor is free from adhesive residues.

SUBFLOOR

The subfloor must be level, flat, clean, free from marks (no felt pen, marker of any type, ballpoint pens, paint, etc.), that could cause discoloration due to migration) sound, dry, solid, hard, smooth (the absorbency must be checked) and not exposed to moisture. If needed, use a primer to have moderately absorbent subfloor (on wooden or anhydride access floor for example).

Access floors must be adjusted to avoid any deviation in depth.

The preparation/dryness of the subfloor and installation procedures should all be in accordance with the current relevant Standard within the country of use. The dryness of a solid subfloor should be below the maximum moisture level permitted when tested in accordance with that Standard.

Before selecting a smoothing compound, check what type of traffic the floorcovering will be subjected to once installed. Latex smoothing compounds are not suitable for areas that will receive heavy traffic, especially heavy, narrow wheeled traffic (see EN 12529, Castors and wheels). Check levelling compound compatibility and follow the instructions of the levelling compound manufacturer.

Note: exclusion of liability (adhesives, levelling compounds, etc.)

Although Tarkett may list a selection of adhesive, levelling compound and surface damp-proof membrane manufacturers and types, we do not guarantee the products listed. The list of products and manufacturers is not guaranteed complete or current.

Tarkett will accept no liability for any of these products failing to perform in conjunction with any of its products. It is the responsibility of the adhesive, levelling compound and surface damp-proof membrane manufacturer and flooring contractor to ensure the products being used are appropriate for use and applied in accordance with the manufacturers' recommendations.

CONDITIONS REQUIRED FOR INSTALLATION

It is important to store the tiles for at least 24 hours before installation at a minimum room temperature of 15°C /see each country regulations/. This temperature should be maintained throughout the installation.

The minimum temperature of the subfloor should be about 10-12°C and room temperature 15°C /see each country regulations/. The recommended relative humidity inside the room should be 35-65% /see each country regulations/.

Tiles should be stored flat in their packages, in small, neat piles (max. 5 boxes high).

UNDERFLOOR HEATING

It is imperative that underfloor heating systems have been previously commissioned and found to be functioning correctly before installation of the floorcovering.

Ensure that the underfloor heating system is switched off 48 hours before installation of the floorcovering commences and remains off for at least 48 hours after installation is completed. While the underfloor heating system is off, an alternative heating source should be provided, if required, to ensure that the installation area is kept at a constant temperature of 18-27°C.

Gradually increase the temperature over a number of days by only a few degrees per day until the desired room temperature is reached.

The temperature should never exceed the floorcovering industry's agreed maximum of 27°C on the underside of the floorcovering (the adhesive line).

LAYING DIRECTION

Before starting to install tiles/planks, determine the type of laying considering the shape of the room and the design to be laid.

Important! Before laying the first rows of tiles, check that:


- the cut tiles closest to the walls are more than 10 cm wide;
- at doorways and corners, the cut tiles are not less than half a whole tile.

Tiles

Tiles should be laid in a checkerboard pattern. Installation should start from the center of the room and finish on the sides (walls).

Planks

Install planks in the same direction to avoid matte/shiny reflection of the surface. Stagger each row of planks to ensure that the end joints do not coincide with the previous row installed. For wooden pattern, avoid installing planks with the same design next to each other.

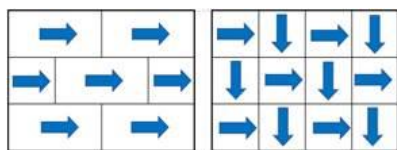

TACKIFIER

Glue with an acrylic pickup adhesive (tackifier) recommended by Tarkett. Apply minimum 120 g/m² of a tackifier adhesive using a roller with medium pile or fine notched trowel (type A4) in the whole area.

Take care to apply enough adhesive to ensure a correct tack.

For more details on tackifier, please refer to the separate sheet: Adhesive recommendations.

https://media.tarkett-image.com/docs/BR_INT_recommended_adhesives.pdf

Install the tiles edge to edge, tight. Flatten by hand as they are placed. Roll with a heavy roller to ensure correct bonding.

Note: In certain conditions (ramps, podiums, steps), a fully setting acrylic adhesive is necessary. Use an acrylic emulsion adhesive recommended by Tarkett (apply 320 to 350 g/m² using a finely serrated trowel).

Caution: when installing on an absorbent subfloor (e.g., wooden access floor), apply an adapted primer to regulate its absorbency. In this way, the tackifier will keep its bonding properties.

AFTER INSTALLATION

IMPORTANT! Wait 48 to 72 hours before allowing any foot traffic or moving in furniture.

Protection of installation

If building work is carried out after installation, the floor should always be protected by covering it with hardboard or plywood sheeting. Masking tape must not be stuck directly to the floor. Never subject a newly installed floorcovering to heavy wheeled traffic at an early stage, as this will force adhesive from beneath the floorcovering.

Initial site clean

An initial site clean is always recommended before the new floorcovering is commissioned.

Residual adhesive should be removed with methylated spirits and a clean cloth.

Lightly soiled floors: vacuum, sweep or damp mop the area to remove loose dirt and building dust. A combined machine is very effective for large areas (combined scrubber/dryer with cylindrical brushes for safety flooring).