

Elafono & HO

INSTALLATION Instructions Elafono & HO

03/2018

IMPORTANT

- Elafono is an 100% nature acoustic solution that can used together with HO installations.
- Elafono is a cork underlay, and should therefor be handled with care.


CONDITIONS AND REQUIREMENTS

- The subfloor must be clean, dry and free from cracks. Dust and contaminants that could prevent adhesion, such as patches of paint, oil, etc., must be removed. Note that asphalt, oil spillage, impregnation agents, pen marks, etc., can cause discoloration. Damp proofing to be carried out according to local building standards. Where required an effective damp proof membrane must be incorporated in the subfloor. Check for dampness in ground supported floors, floors above boiler rooms, floors with underfloor heating or containing high temperature pipework etc.
- Where underfloor heating units are installed in the concrete slab the heating units shall be;
Turned on prior to laying of the floor covering for 3-4 weeks to ensure that the moisture condition of the heated subfloor will permit successful laying of the floor covering. Be turned off 48 h prior to the commencement of installation to allow the subfloor to return to the temperature range recommended by the manufacturer of the floor covering. The heating units shall remain turned off during the laying operations and shall not be turned on again until 6-7 days after the laying is completed in order to allow the adhesive to set.
- **When installing this product on concrete subfloors that do not include damp-proofing, the moisture content measured in terms of relative humidity must not be higher than 85% (in UK and Ireland 75% according to BS 8203). Or less than 2% with CM (Carbide Method)**
- Where pipes are laid in the floor they should be arranged so that the flooring material is not continuously subjected to a temperature above 27°C, otherwise there may be discoloration and/or other alterations of the material
- Extra special care must be taken regarding installations on surfaces where significant temperature changes can be expected, for example, floors exposed to strong sunlight, as adhesion strength and subfloor treatment may be heavily stressed.

- Floor boards and similar substrates should have a moisture content of max 8% (equivalent to 40% RH at +20°C), so that any subsequent movements cannot cause damage.

PREPARATION

- Dust and loose particles must be thoroughly removed. Highly absorbent or variably absorbent substrates should be sealed with suitable primer. The primed surface must be completely dry before laying commences.
- When applying smoothing compounds, use compounds that meet the minimum requirements in the building standards. NOTE: Discolouration can occur when using two-parts polyester compounds if they are mixed incorrectly and/or insufficiently. Do not mix directly on the substrate.
- Use only a lead pencil for marking. Note that any marks made with felt-tipped pens, permanent and non permanent ink markers, ball point pens etc. can cause discoloration due to migration.
- Prior to laying, allow the material, adhesive and subfloor to reach room temperature, i.e. a temperature of at least 18°C. The relative air humidity should be 30-60%. Rolls must be stored indoors at least 24 hours before installation, preferable 48 hours.
- The rolls should be stored on an even surface. Any faults in the material must be reported immediately to your nearest sales office. Always quote the colour and roll numbers, which are stated on the label.

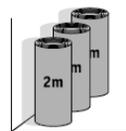

Store 2m rolls upright in a safe position with distance between the rolls.


INSTALLATION ELAFONO

- Installation should be carried out at room temperature between 18°C to 26°C. Subfloor temperature must be at least 15°C. The relative air humidity in the premises should be 35-65%. Maintain same temperature and humidity for at least 72 hours after installation.
- Sections of flooring must be cut to the required lengths, and stored in the room where they are to be installed. Sheets should lay on the floor and relax for 24/48h at the same temperature.
- Install Elafono edge to edge with jute backing facing downwards.
- Laying direction: install Elafono and HO in the same direction, the joints of the Elafono and of the HO must have an offset in relation to each other by about 20 cm.
- An acrylic adhesive for linoleum should be used with a B1 spatula (350-400 g/m²). See the adhesive manufacturer's instruction regarding coverage, open time etc. Example of suitable adhesives can be found at professionals.tarkett.com
- When spreading the adhesive, fold half of the sheet(s), apply the adhesive, respect drying time so that it become tacky. By doing the finger test, the adhesive should be tacky and no residue should stick to your finger. Then, fold back the sheet into the wet adhesive and roll it with a cork press. Repeat this operation for the second half.
- After complete installation, roll crosswise the whole surface with a heavy roller (approx. 65kg).


INSTALLATION HO OVER ELAFONO

- **IMPORTANT** Do not install HO until the glued Elafono is completely dried (about 24 to 48 hours after fitting).
- Cut the sheets into length and lay them out to acclimatise and relax prior to installation. This is particularly important for longer lengths.
- **Sheets must be installed so that colour differences are avoided. Reverse sheets whenever possible, overlap and cut edges.** Factory edges must be overlapped and cut. Prior to overlapping the vinyl sheet, trim off the factory edge on the bottom sheet. This is best done by striking a chalk line, then – using a utility knife and straight edge – cut through and remove the scrap piece. Overlap the top sheet and then trace the bottom edge onto the top sheet with a correctly set under scriber.
- Caution: bonding over Elafono may require extra tack time due to non-absorbent surface. Always control by finger test (the adhesive should be almost dry and tacky)
- Recommended adhesive is UZIN KE 2000S or similar with the same characteristics. Spatula A1/A2.
- Apply the flooring by using the double drop method. Apply the floor into fresh adhesive. Rub the surface to ensure that all air is expelled, then fold it back to allow the adhesive to become tacky. Re-apply the sheet into the tacky adhesive.
- Rub the face surface down thoroughly to ensure that the floor covering makes good contact with the adhesive and that all air is expelled. Make sure that the tool used for rubbing down the floor covering does not scratch the surface. A broom is not suitable for this purpose. Use a floor roller (approx. 65 kg) and roll crosswise over the floor.

WELDING

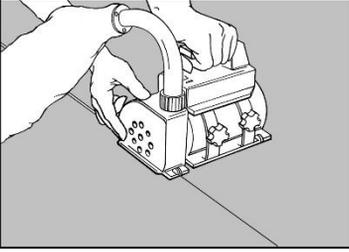


The sheets are hot welded. Do not weld until the adhesive has bonded completely, wait 24-48h. The joints are chamfered or grooved to about $\frac{3}{4}$ of the thickness using a hand grooving tool or machine prior to welding.

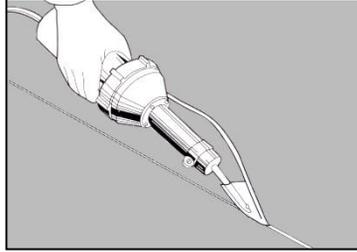

Weld with hot-air and Tarkett Speed Welding Nozzle. Carry out a test welding on a left-over piece before commencing work, to adjust speed and temperature **IMPORTANT:** When welding iQ Megalit, a Tarkett Speed Welding Nozzle or equivalent should be used.

TRIMMING

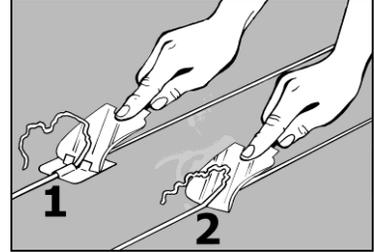

CAUTION: Welded seams must cool to room temperature before trimming. Start trimming where you began welding. All trimming of welding thread is recommended in two steps: rough and fine trimming.

INSPECTION

- The work must be completed with an inspection. Ensure that the newly laid flooring is free from adhesive residues and that the bond is consistent with no bubbles.

AFTER INSTALLATION

- Always protect the floor with thick paper, hard board or similar during the construction period. If using tape, this must not be applied directly to the floor surface.
- **IMPORTANT!** Restrict foot traffic for 24 hours after installation. No heavy traffic, rolling loads or furniture placement for 72 hours after installation. Most suppliers of floor adhesives specify 72 hours before the final strength is achieved."

FOR THE BEST RESULTS

- Use only adhesives recommended by adhesive manufacturer.
- Use a matting system at entrances to protect from dirt and dust. Rubber can cause discoloration to the floor.

GENERAL

- Contact your Tarkett representative if unsure about any part of the installation.
- This information is subject to change continuous improvement

EXCLUSION OF LIABILITY

- Although Tarkett may list a selection of adhesive, levelling compound and surface damp-proof membrane manufacturers and types, we do not guarantee the products listed. The list of products and manufacturers is not guaranteed complete or current. Tarkett will accept no liability for any of these products failing to perform in conjunction with any of its products.