

Installation instructions

OMNISPORTS SPEED

Table Tennis



PREFACE

In order to provide the customer with the best use of product, this installation guide has to be followed carefully to guarantee conformity and ensure sports performance. If not, Tarkett Sports will not be responsible for damages following installation.

Any use of the product for purposes other than the ones set out, in the condition of use, should be submitted to Tarkett Sports for prior approval. If you need any further information, please contact your dealer who will provide you with the appropriate advice.



Check before installation, the quality of the delivered product. If the product is defective, contact Tarkett Sports. If installation is in process, it shall be stopped on the day the defect is noticed otherwise the Warranty shall not apply.

SUBFLOOR

All subfloors must be dry, flat, clean, strong and without cracks.

If installed over wood flooring, check that there is no levelling difference between panels or planks.

The moisture rate for concrete or cement screed must be in accordance with the local requirements.

For example : France ≤ 4,5% and Germany < 2% (CCM method),...

Choice of installation techniques Subfloor	
Surface appearance	Smooth
Flatness	≤ 6mm under 3m ruler
Altimetry	+/- 1cm compared to the average
Moister rates for concrete	Local standard compliant
Moisture rates for anhydrite screed	< 0,5%

Important notice : no expansion joints shall be present in the playing area

INSTALLATION

1 – GENERAL CONDITIONS



The temperature in the room must be $\geq 15^{\circ}\text{C}$ and for the subfloor $\geq 12^{\circ}\text{C}$. Relative air moisture rate needs to be between 35 et 65%.

Omnisports Table Tennis rolls are to be stored horizontally, on a plain/flat, dry and without any ruggedness. They must not be stacked.



Tarkett Sports recommends to install rolls in the lengthwise direction.

Use one batch for the same room.

Mark out longitudinal axis.

Unroll the rolls along the longitudinal axis using the Rollens device from Janser, following the chronological rolls manufacture order, leaving a space of 1 cm between them for at least 24 hours.


Keep the cardboard tubes for the removal.

If necessary, re-cut the selvage.

Let the Omnisports Table Tennis rest before adjusting the sheets, edge-to-edge (tight).



Rollens unroller

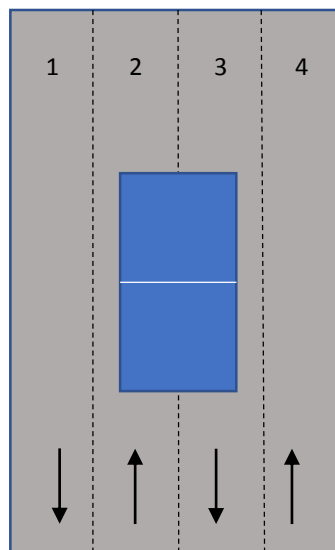

Uni :
alternate direction

INSTALLATION

2 – TEMPORARY INSTALLATION



After installation, ensure that the temperature is always maintained between 10 and 30°C.

Sheets are fixed on the subfloor by using a clear double sided adhesive tape :

D200 1 roll = 96 mm width x 50 lm, sold in 12 rolls/carton = 600 lm).

D300 1 roll = 96 mm width x 50 lm, sold in 20 rolls/carton = 1000 lm).

Shelf Life = 6 months !

Contact :

Alizon Industrie

ZA du Margier av. P. Brossolette

BP 106 – 26802 Portes-lès-Valence cedex

+33475 41 82 0127

cblache@accept.fr

Use the tape D200 for installations over wooden floors (parquet), synthetic or subfloors like PVC, PU ...



Use and D300 for installation over concrete subfloors.

Check that the double face tape removal does not damage the existing subfloor (parquet varnish).

Apply the tape with the double sided Tape unroller device.

Contact :

<https://www.janser.fr>

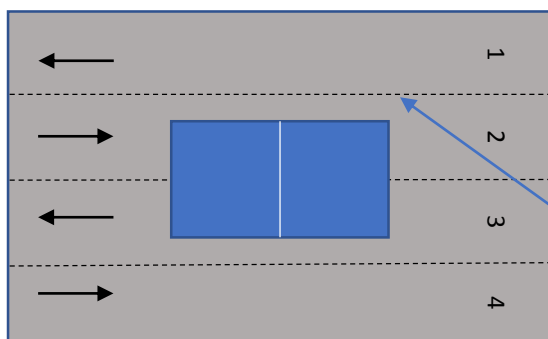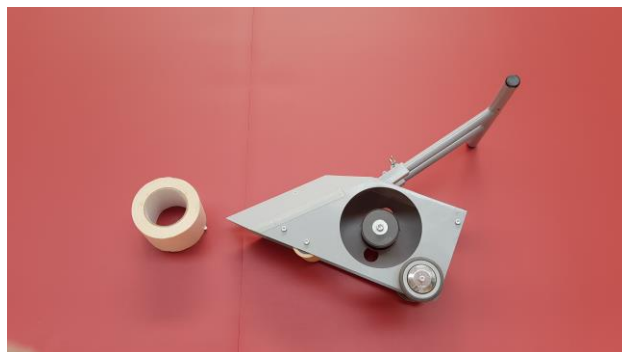

--- D200 or D300

INSTALLATION

2 – TEMPORARY INSTALLATION



Push the double sided tape unroller and remove the protective tape at the same time.



Then, walk and press the surface with a roller to assure a perfect taping.

MAINTENANCE DURING THE COMPETITIONS

NOTA BENE:

Omnisports Table Tennis has a factory applied PU surface treatment. It is important to use appropriate footwear in order to not damage the surface.

Please note that to provide the end-customer with the best use of the flooring, the maintenance procedure must carefully be followed.

If not, Tarkett will decline all potential damages following a non appropriate maintenance procedure.

CLEANING ADVICE

- The players must wear appropriate shoes with white soles dedicated to table tennis practise.
- It is strongly recommended to install a doormats at the entrance of the sportshall.
- These mats can be built up with different materials, that help to catch humidity, dirt, dust....:
 - A gridy part, that allows to remove gravels, ground particles...,
 - A synthetic part to catch dust under soles,
 - A textile part dedicated to absorption of humidity.

DAILY MANUAL CLEANING

- Consists in removing dust by sweeping or vacuum cleaning.

PERIODICAL CARE

- Machine cleaning: use an Rotowash automatic scrubber machine fitted out with soft nylon brushes.
- A neutral floor-cleaner (pH6 to 8) is convenient (dilution 1%), our advice:

Jontec Asset – Johnson Diversey -
johnsondiversev.com
Rotowash France : 41 rue du Mûrier - Equatop -
37540 St Cyr sur Loire
Tél : 02 47 41 11 10 / Fax : 02 47 41 00 15

Important: Please follow manufacturer's recommendations.

CAUTION, DO NOT USE:

- Benzine, toluol, acétone, tétrachlororoethene, thinner, oilwax or strong scouring powders.....
- Black rubber (tires, pad on the feet of seats or benches, ...) can cause permanent discolouration and should not be used. If unsure, protect the floor by placing a piece of carpet or similar material underneath.

PERIODICAL CARE OR REFRESHMENT OF THE SURFACE

A periodical care can be done by using an Rotowash automatic scrubber machine fitted out with soft nylon brushes.
 A alkaline floor-cleaner (pH=10/11) with a 10% dilution is recommended and rinse with clear water.

Important: Please follow manufacturer's recommendations.

STAINS REMOVAL

- Spills should be wiped up quickly, by using a white clean cloth, before they have time to set, then clean the floor with clear water.
- Spray alkaline detergent with dilution 20%, let it work during 1 minute and sweep with a white clean cloth.

Important: Please follow manufacturer's recommendations.

NON SPORTIVE EVENTS

- When organising non sportive activities (exhibitions, concerts...) it is required to protect the Table Tennis floor.
- Tarkett proposes a wide range of protection covering, such as:
 - ProtecTiles
 - Touchdown

For any further information please contact our Sales representatives or your regular Tarkett dealer.

REMOVAL OF THE OMNISPORTS TABLE TENNIS

- Remove the advertising stickers
- Clean the floor and let it dry completely
- Flip over the rolls
- Remove all double faced tapes on the subfloor
- Fix the rolls properly on the cardboard tube with AT7 Adhesive tape.
- Re enroll the Omnisports Table Tennis tight on the cardboard tube.
- Omnisports Table Tennis rolls must to be stored horizontally, on a plain/flat, dry and without any ruggedness.
- They must not be stacked.

AT7 Black Tape

1 roll = 100 mm width x 33 lm, sold in 12 rolls/carton = 396 lm).

Shelf Life = 12 months !

Contact :

Alizon Industrie

ZA du Margier av. P. Brossolette

BP 106 – 26802 Portes-lès-Valence cedex

+33475 41 82 0127

cblache@accept.fr

